


## BEFORE INSTALLATION

**TOOLS NEEDED**

UTILITY KNIFE  
CARPENTER SQUARE  
TAPE MEASURE



Lay tile package flat. Allow 48 hours to acclimate to room temperature of at least 65°F (18°C).

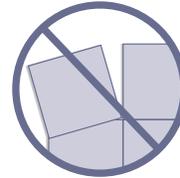

Do not apply to loose or uneven flooring.



Do not apply over radiant heated floors.



Be sure surface is clean, smooth, flat & dry before applying. Area must be free of grease, dirt, wax, and other oils & materials.

### IF INSTALLING OVER CONCRETE

A primer adhesive, such as liquid neoprene, is necessary for a secure application.

## INSTALLATION


1. Mark perpendicular guidelines to find the center of the room.

\*Using a chalk line is a preferred tool for this step.


2. Leaving the back liner on, lay tiles out from the center of the room, to the walls, ensuring each arrow on the back of the tiles are pointed in the same direction. After laying out tiles, assess the ones on the outer edges and decide if you need to shift all tiles over to avoid abnormally thin tile pieces when trimmed.
3. Starting from the center of the room, remove backing from your first tile and press firmly into place. Avoid touching adhesive - dust, dirt and oils will affect its strength.

Install next tile tightly against the side of the first tile. Working on one quarter of the room at a time, apply tiles in a step pattern.


4. If necessary, use a straight edge and utility knife to trim tiles to fit, when you reach the edge of your walls.

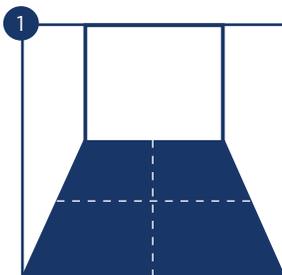


center of room

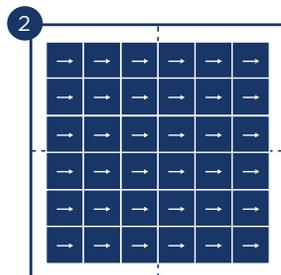

back of tiles

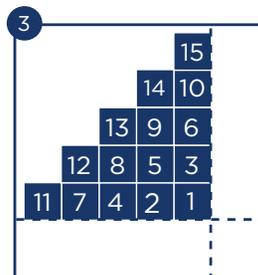

step pattern

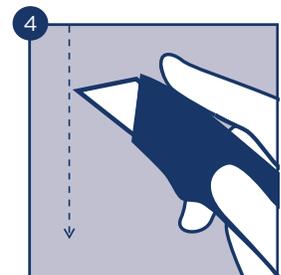

trim as needed

## CLEANING TILES



### DO

- Allow 5 days to clean tiles after application.
- Use a vinyl floor cleaner.
- Sweep, mop, vacuum and/or dust as desired.

### DO NOT



Do not clean with soap, or an excessive amount of water.